

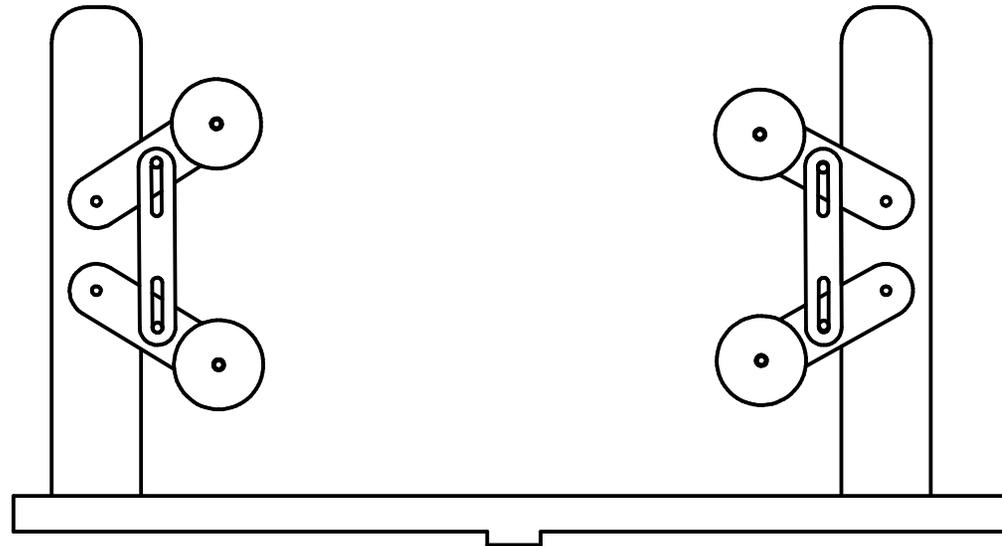
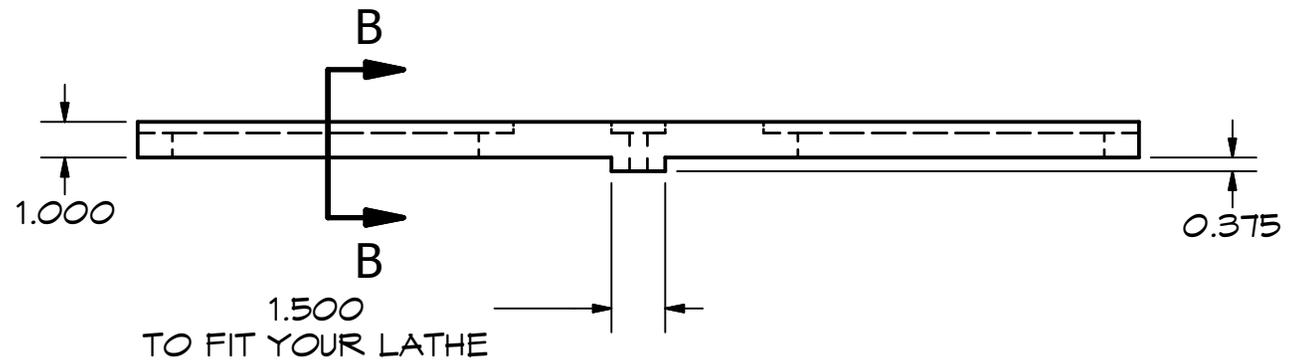
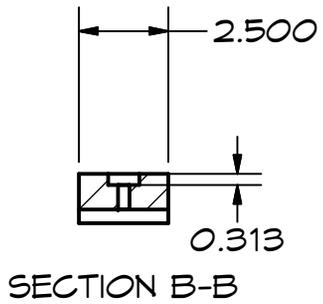


PARTS LIST		
ITEM	QTY	PART NAME
1	1	BASE BAR
2	2	VERTICLE ARM
3	4	WHEEL ARM
4	4	WHEEL
5	4	WASHER AS REQ'D
7	2	WHEEL ARM LINK

A-PDF Merger DEMO : Purchase from www.A-PDF.com to remove the watermark


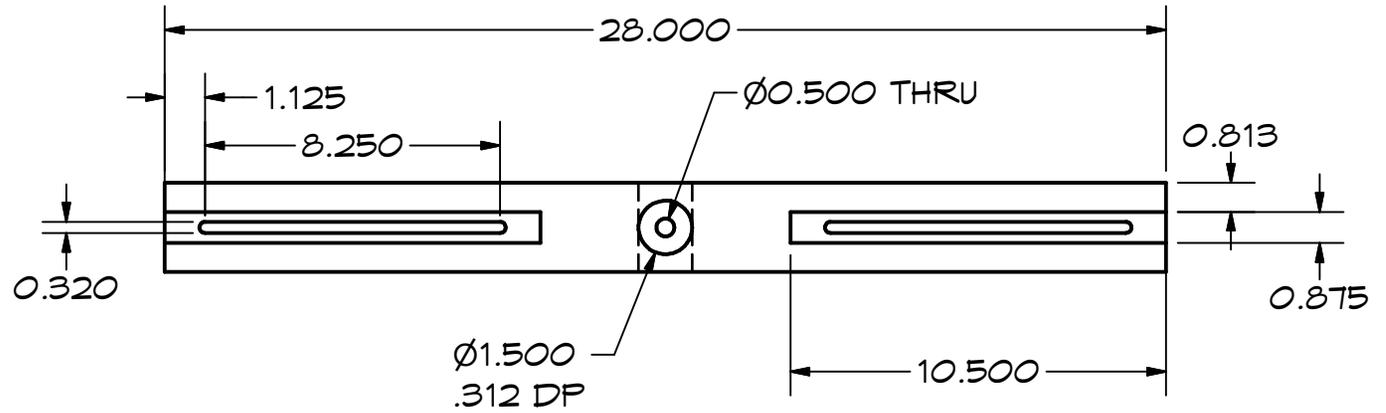


# STEADYREST FOR 16" LATHE

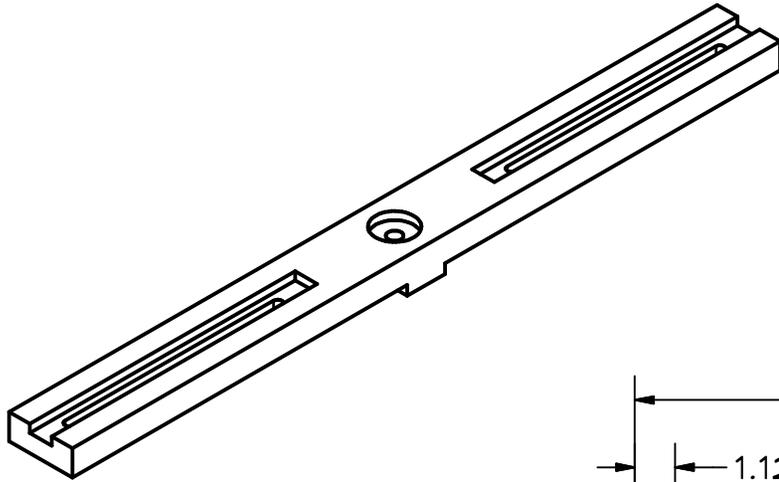




# ITEM 1 BASE BAR

1 EA REQ'D


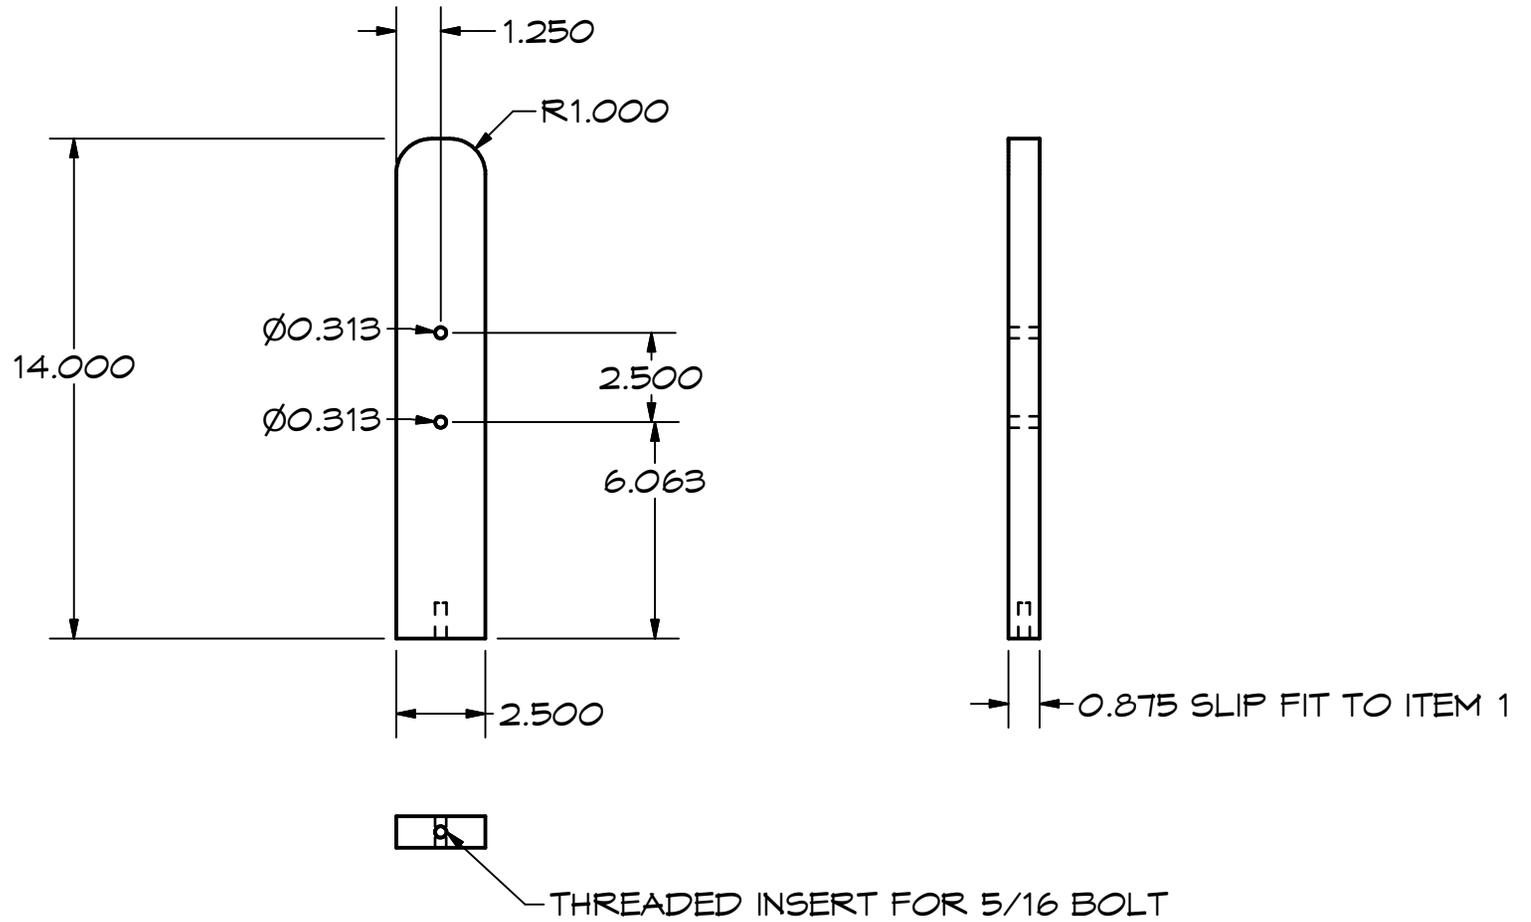
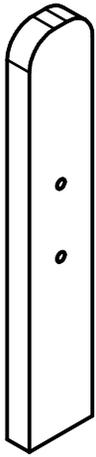


## ITEM 2 VERTICLE ARM

2 EA REQ'D <sup>3</sup>

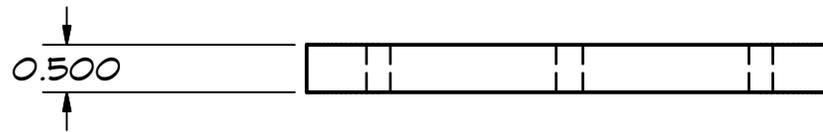
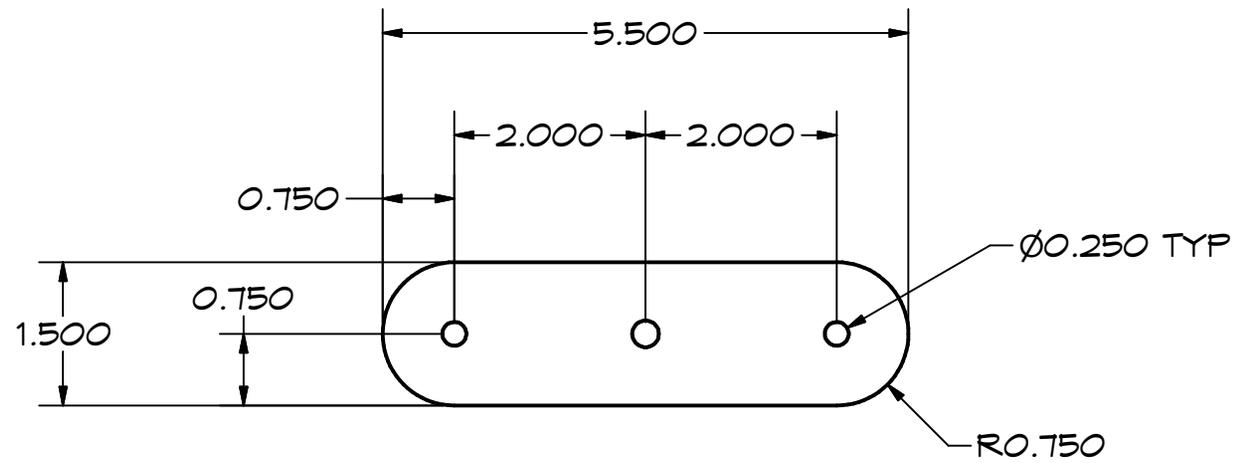
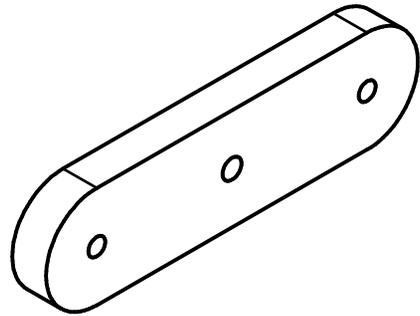


ITEM 3 WHEEL ARM  
4 EA REQ'D

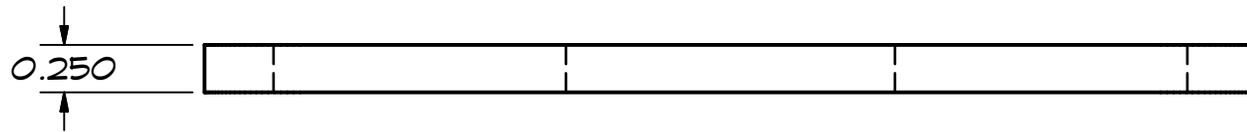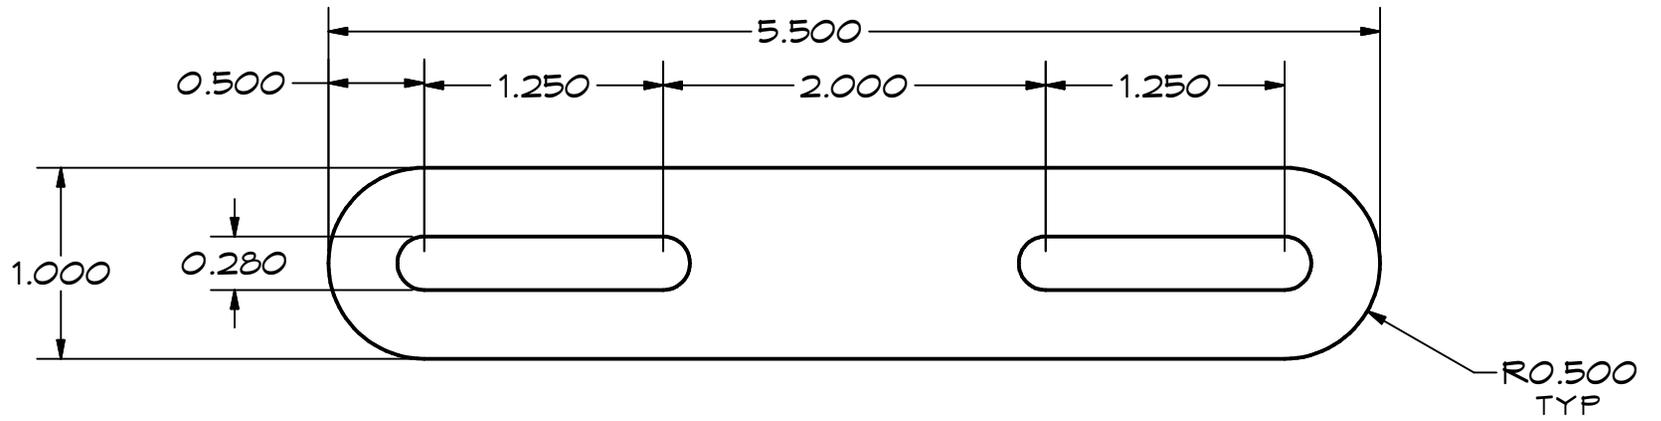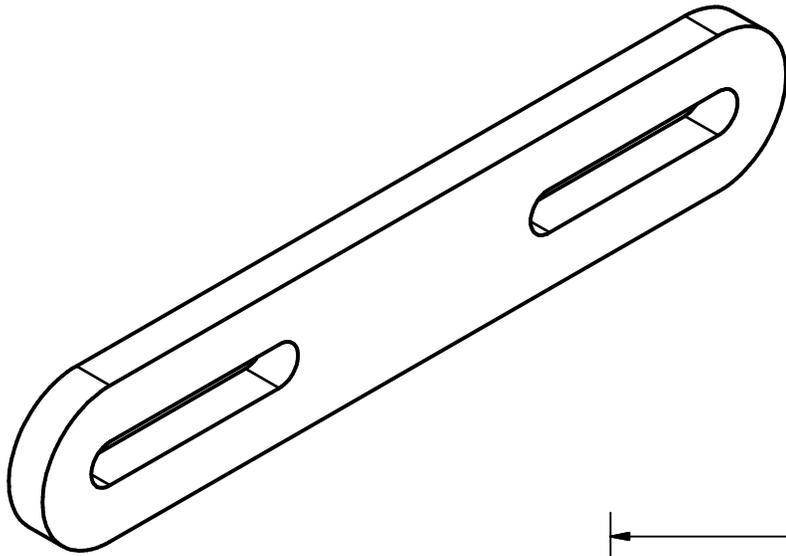

# ITEM 7 WHEEL ARM LINK

2 EA REQ'D

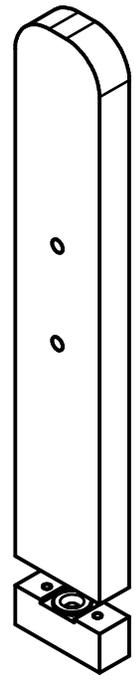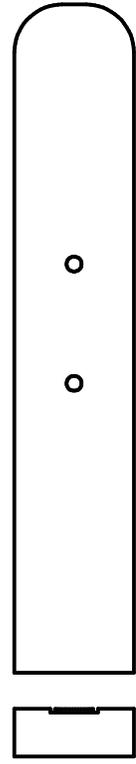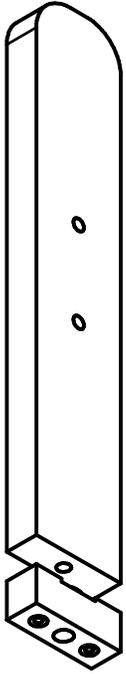

DRILL BOLT HOLE THROUGH BOTTOM ABOUT 2" DEEP  
CUT BOTTOM OF ARM OFF 1"  
DRILL 2 SCREW HOLES AND COUNTERSINK  
NOTCH FOR T-NUT GET IT JUST UNDER FLUSH  
DRILL CLEARANCE HOLE FOR T NUT IN CUT OFF BLOCK  
DO NOT FORCE T-NUT IN OR YOU WILL SPLIT THE BLOCK  
GLUE AND SCREW BLOCK BACK ON